




INSTRUCTION MANUAL

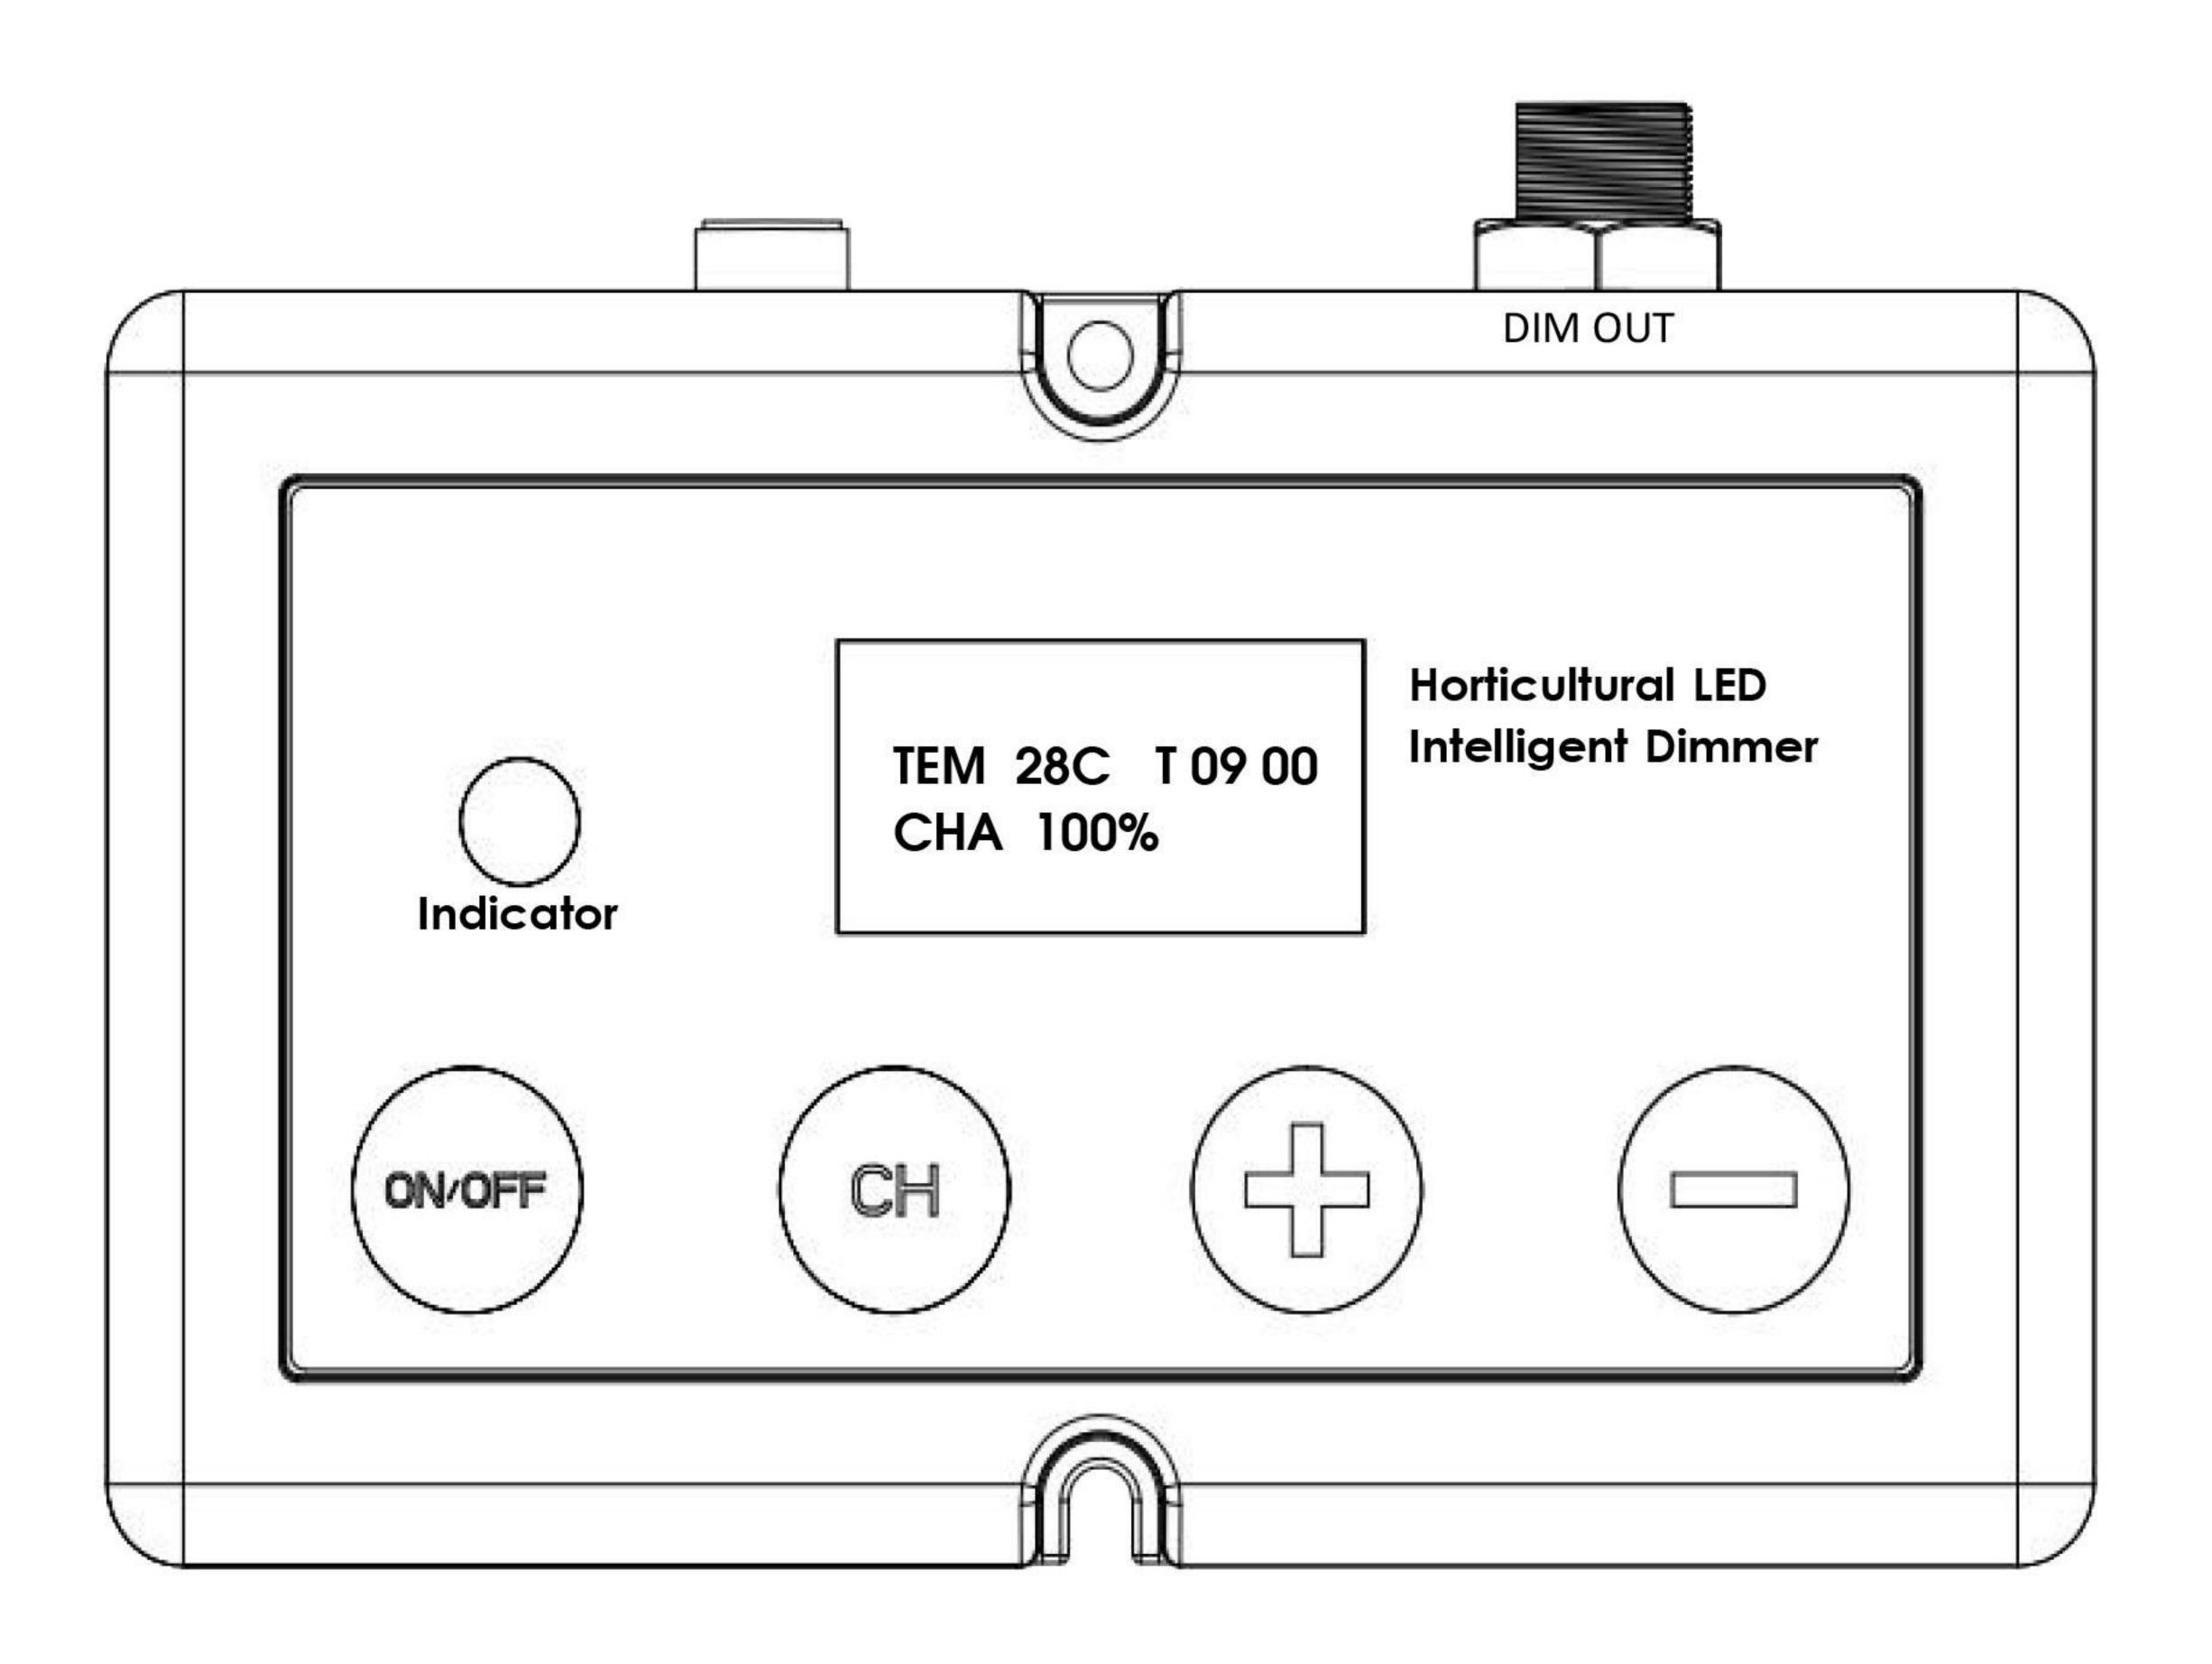

PWM REMOTE CONTROLLER

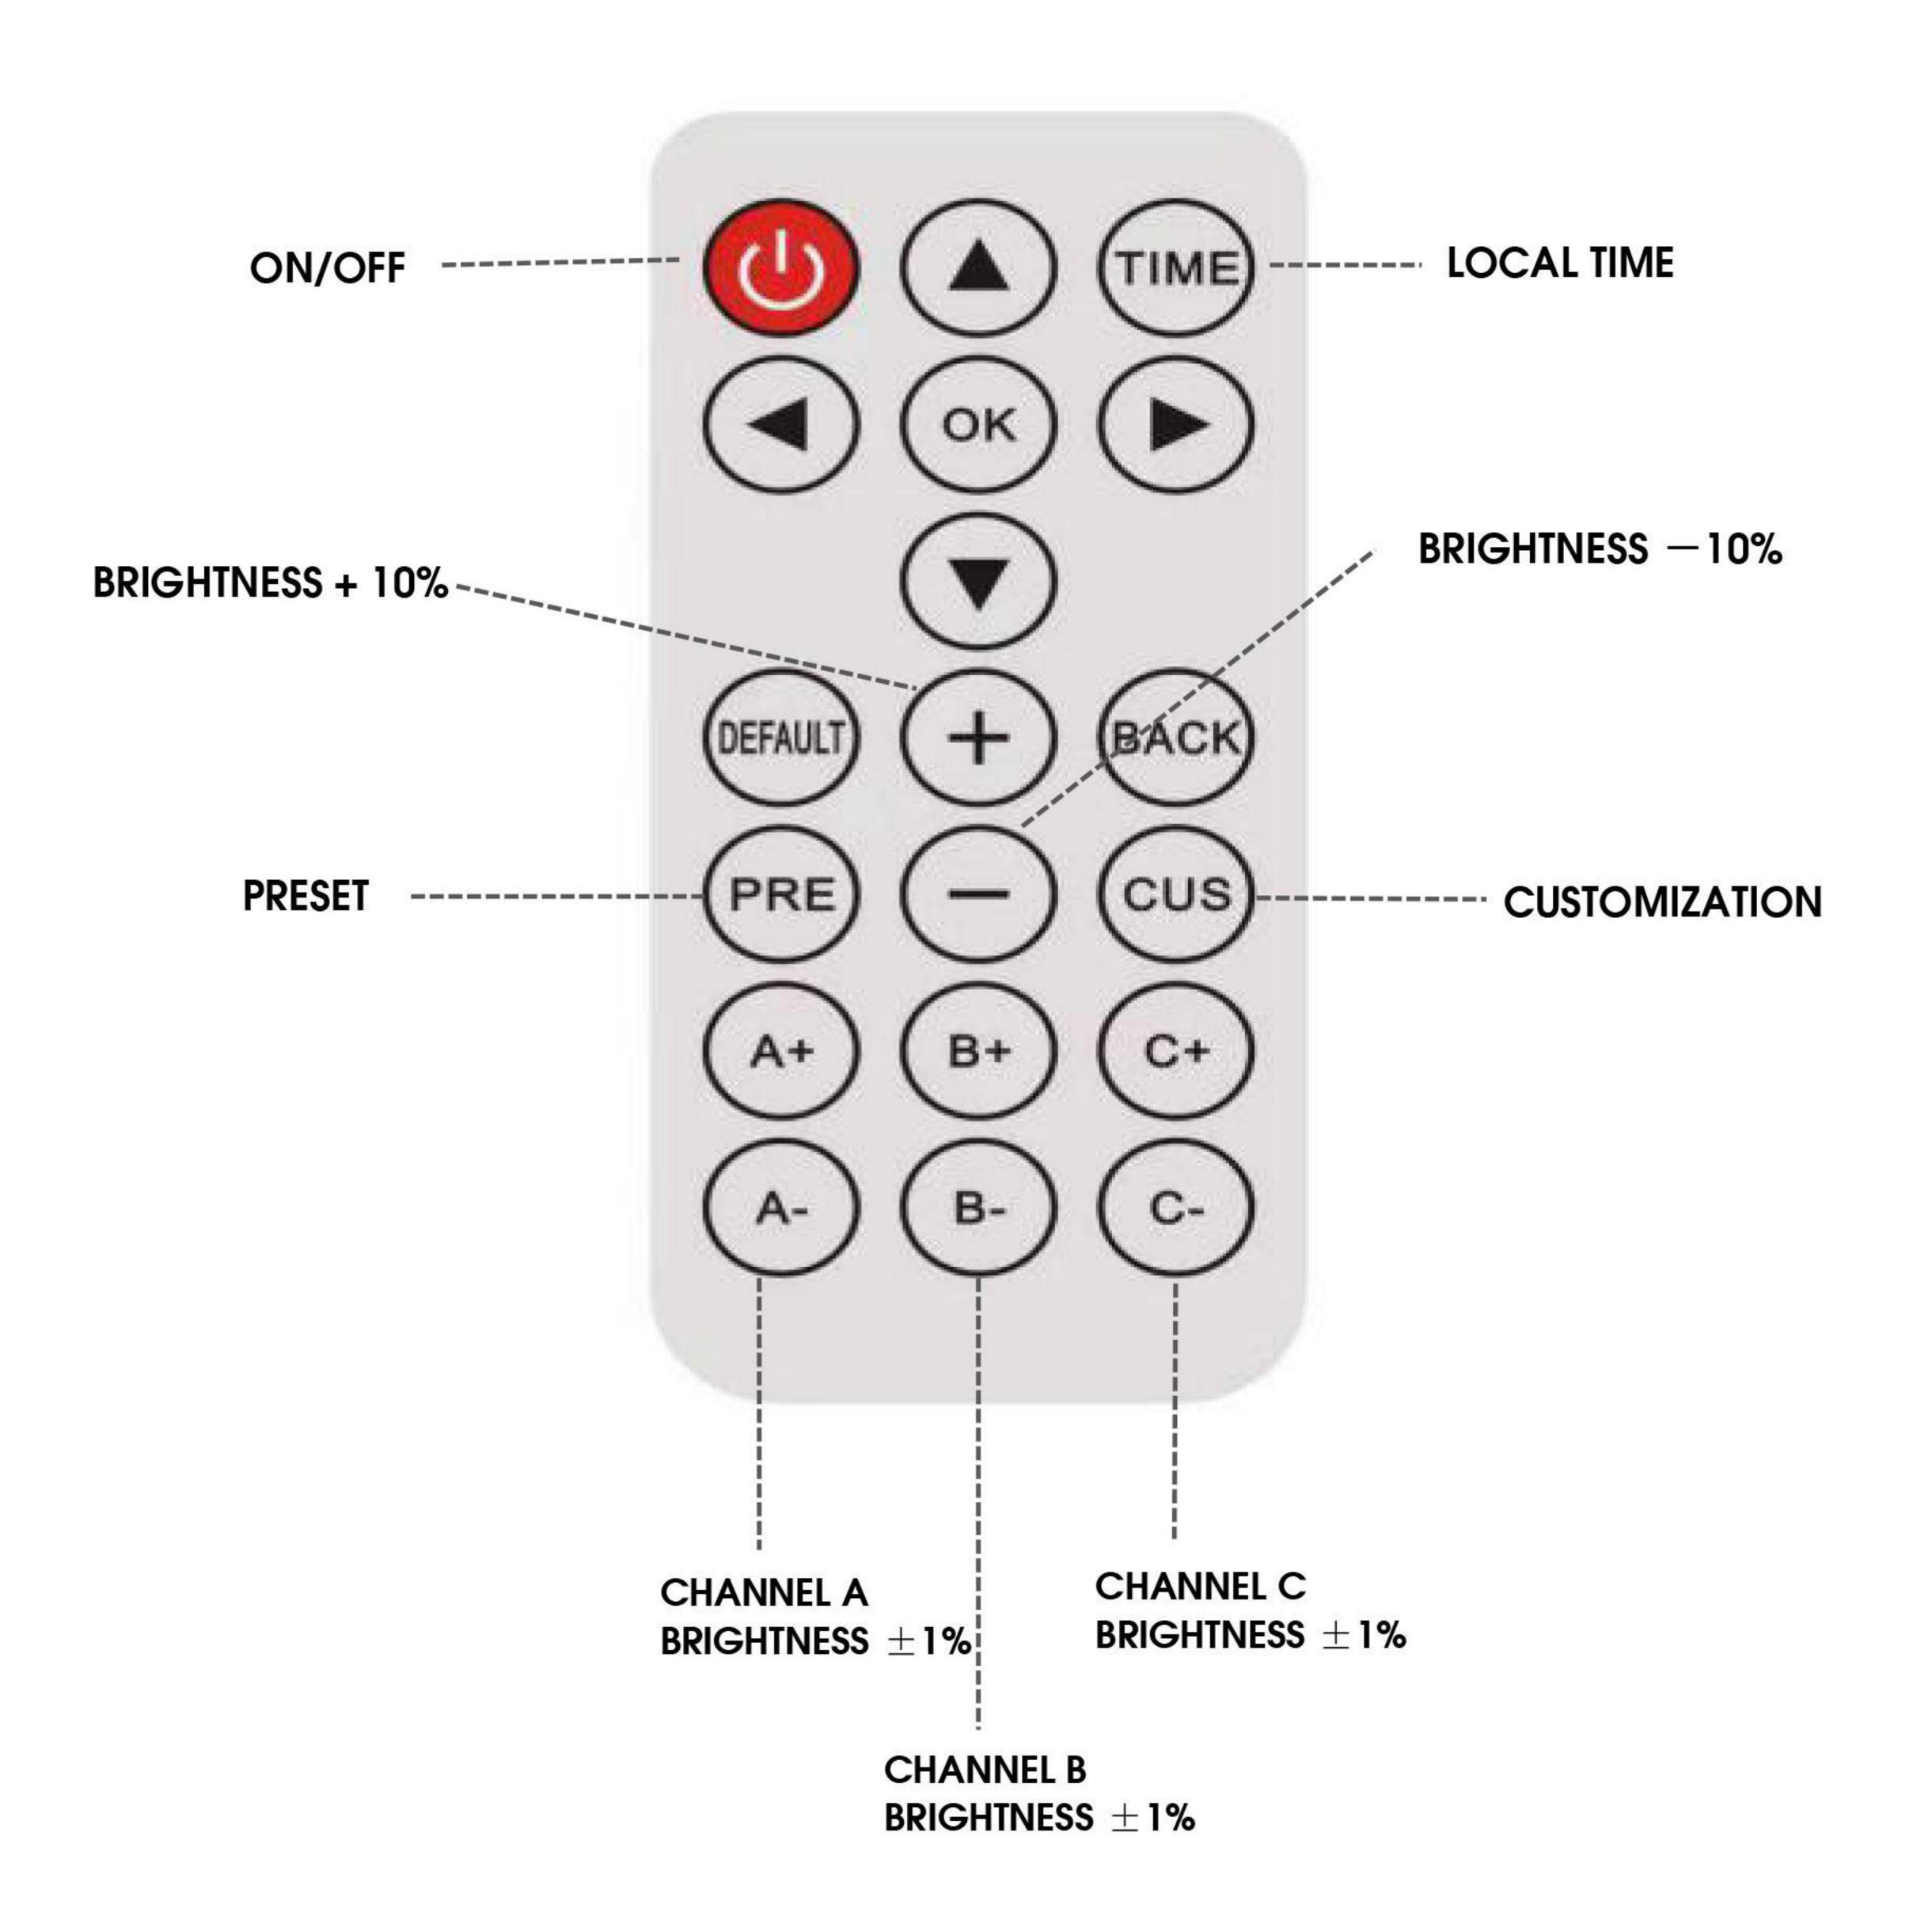

Accesarries for Dimming/Daisy Chain Dimming Function

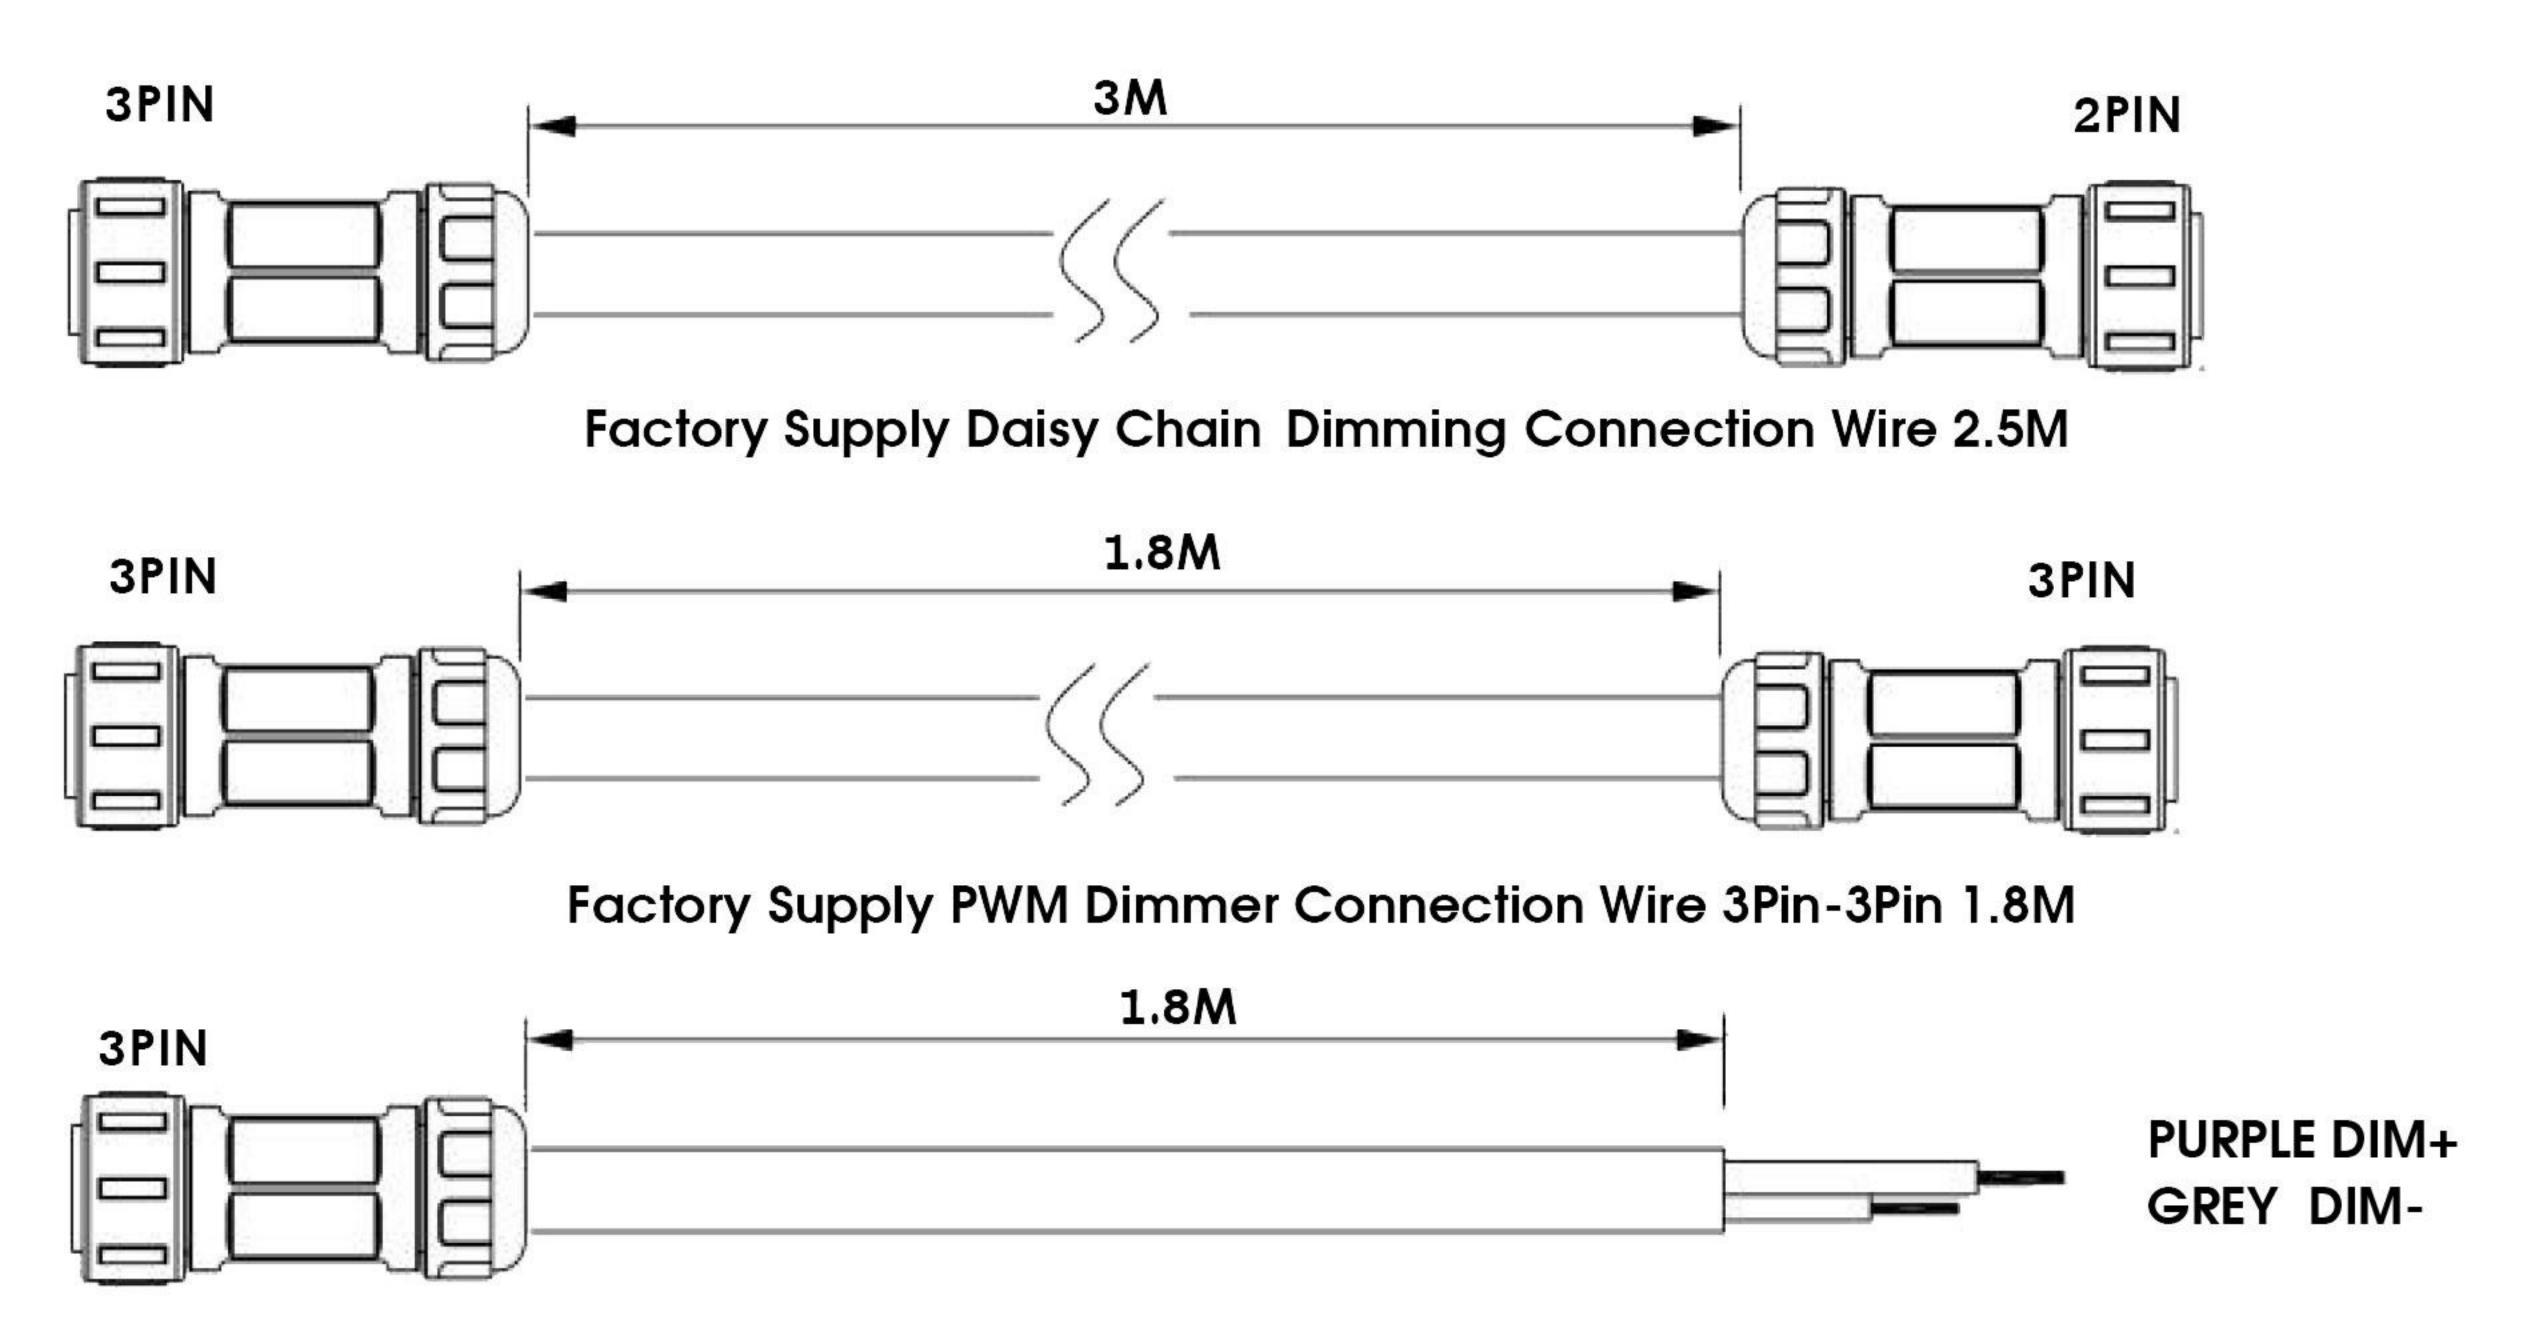


PWM Controller Connection Wire 3Pin 1.8M for 0-10V dimmer or Non-Factory Supply LED Lights

SETTING STEPS:

1.Press (b) to turn on/off the LED fixtures.

>Main interface with ENVIRONMENT TEMPERATURE (**TEM**) /LOCAL TIME (**T**) /BRIGHTNESS(**CHA-Channel A**)

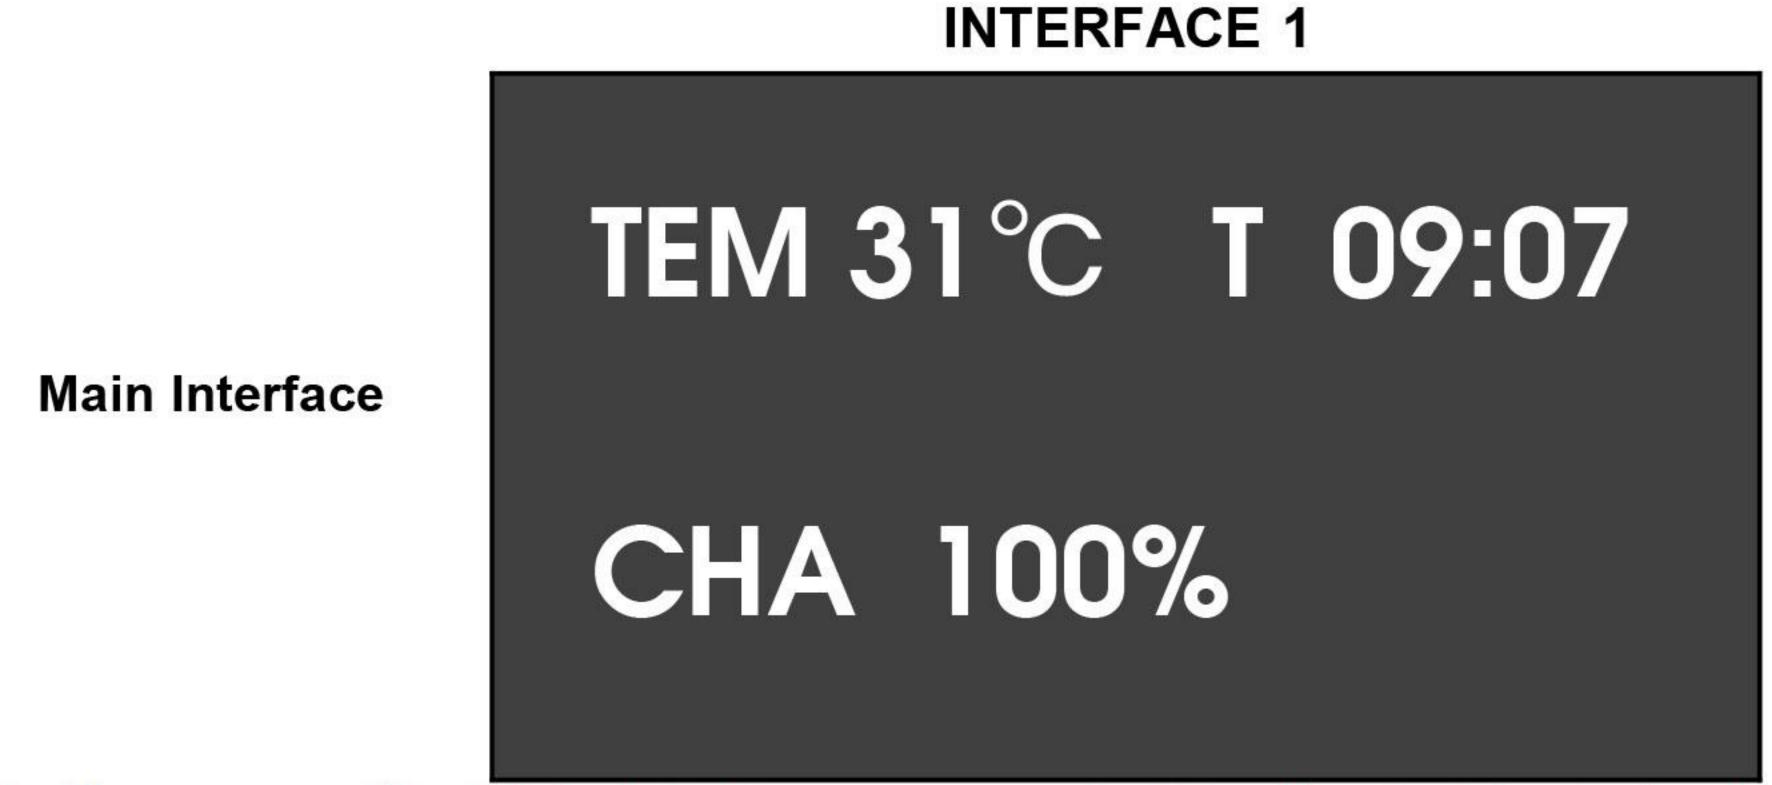

Note: The screen will get into default screen saver in 60s without giving instruction, press "OK" to wake it up.

2.Please set local time first before using dimming function: press"TIME" for local time setting.

Step1:Press TIME to enter into time setting interface.

Step2:Press "OK" to select item,press for HOUR / MINUTE toggle

Step3:Press" + - " to change number and press "OK" to save and "Back" back to main interface.

Local Time Setting Interface

LOCALTIMESET

09:07

3. Customization settings: The dimmer can set/save 2 customized settings in the system.

Step1:Press"CUS" to enter into customization settings(INTERFACE 3).

Step2:Press "OK" to select,press for CUSTOM 1/CUSTOM 2 toggle

Step3:Press"OK"to select CUSTOM1 or CUSTOM2,press"OK" again to enter into setting interface(INTERFACE 4)

Step4:Press"OK" to start setting,press directional key UP/DOWN/LEFT/RIGHT to select BRT(BRIGHTNESS) and TIME(INTERFACE 4).press " + - " to change the number.

Step5:When all customization setting done, press"OK" to save and auto run the "CUSTOM" settings (INTERFACE 5)

Note:Press"Back" can cancel the custom setting and back to main interface.

INTERFACE 3

UP/DOWN TO SELECT
CUSTOM 1
or CUSTOM 2

CUSTOM PROGRAMS CUSTOM1 CUSTOM2

INTERFACE 4

CUSTOMIZATION INTERFACE

SET 1 to SET 8 8 Time Periods in 24Hour


			EXAMPLE:		
			CH-A	BRT	TIME
CH-A	BRT	TIME	SET1	10%	06:00
			SET2	50%	07:00
SETT	000	00:00	SET3	80%	08:00
	UUU	00.00	SET4	100%	08:30
	000	00.00	SET5	90%	16:30
SET2	000	00:00	SET6	80%	17:00
			SET7	70%	17:30
			SET8	60%	18:00



CAUTIONS:

Assume that SET1 start time is 06:00, the SET2 start time should be after 06:00 like 06:01 and can not be 06:00 which is same with SET1, if set the same time, the system will be confused at 06:00 and can not run normally at this time.

INTERFACE 5

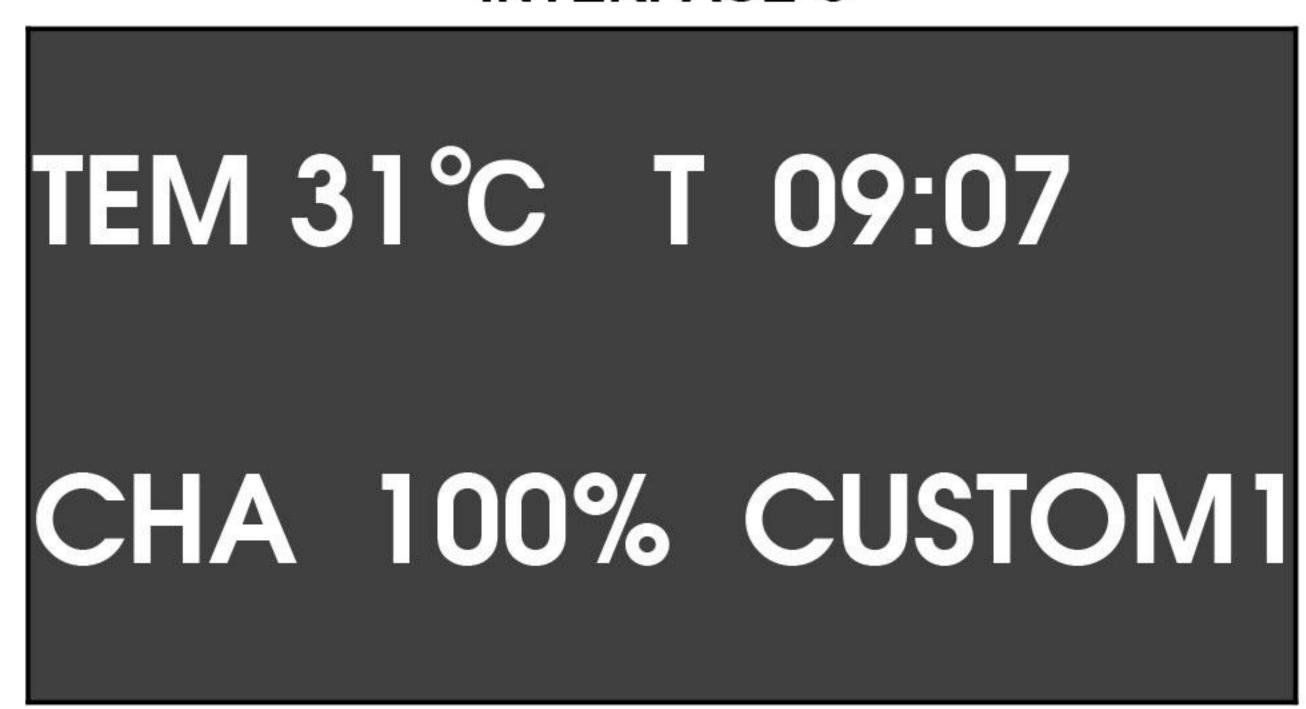

4.Press "PRE" to select factory preset programs, there are 2 preset programs in the system, press the directional key "UP/DOWN to select "PRESET1" or "PRESET2", once selected, press "OK" to save and run the program.

INTERFACE 6

PRESET PROGRAMS
PRESET 1
PRESET 2

INTERFACE 7

TEM 31°C T 09:07

CHA 100% PRESET1

Note:Press"Back" can cancel the Preset setting and back to the main interface.

PRESET1				
CH-A	BRT	TIME		
SET1	10%	06:00		
SET2	20%	06:30		
SET3	30%	07:00		
SET4	50%	7:30		
SET5	80%	08:00		
SET6	100%	09:00		
SET7	80%	15:00		
SET8	50%	16:00		
SET9	30%	17:00		
SET10	20%	17:30		
SET11	10%	18:00		
SET12	0%	19:00		

PRESET2				
CH-A	BRT	TIME		
SET1	10%	05:00		
SET2	20%	05:30		
SET3	30%	06:00		
SET4	50%	06:30		
SET5	80%	07:30		
SET6	100%	09:30		
SET7	80%	16:30		
SET8	50%	17:30		
SET9	30%	18:30		
SET10	20%	19:00		
SET11	10%	19:30		
SET12	0%	20:00		

Designed for Commercial Horticultural LED Luminaire